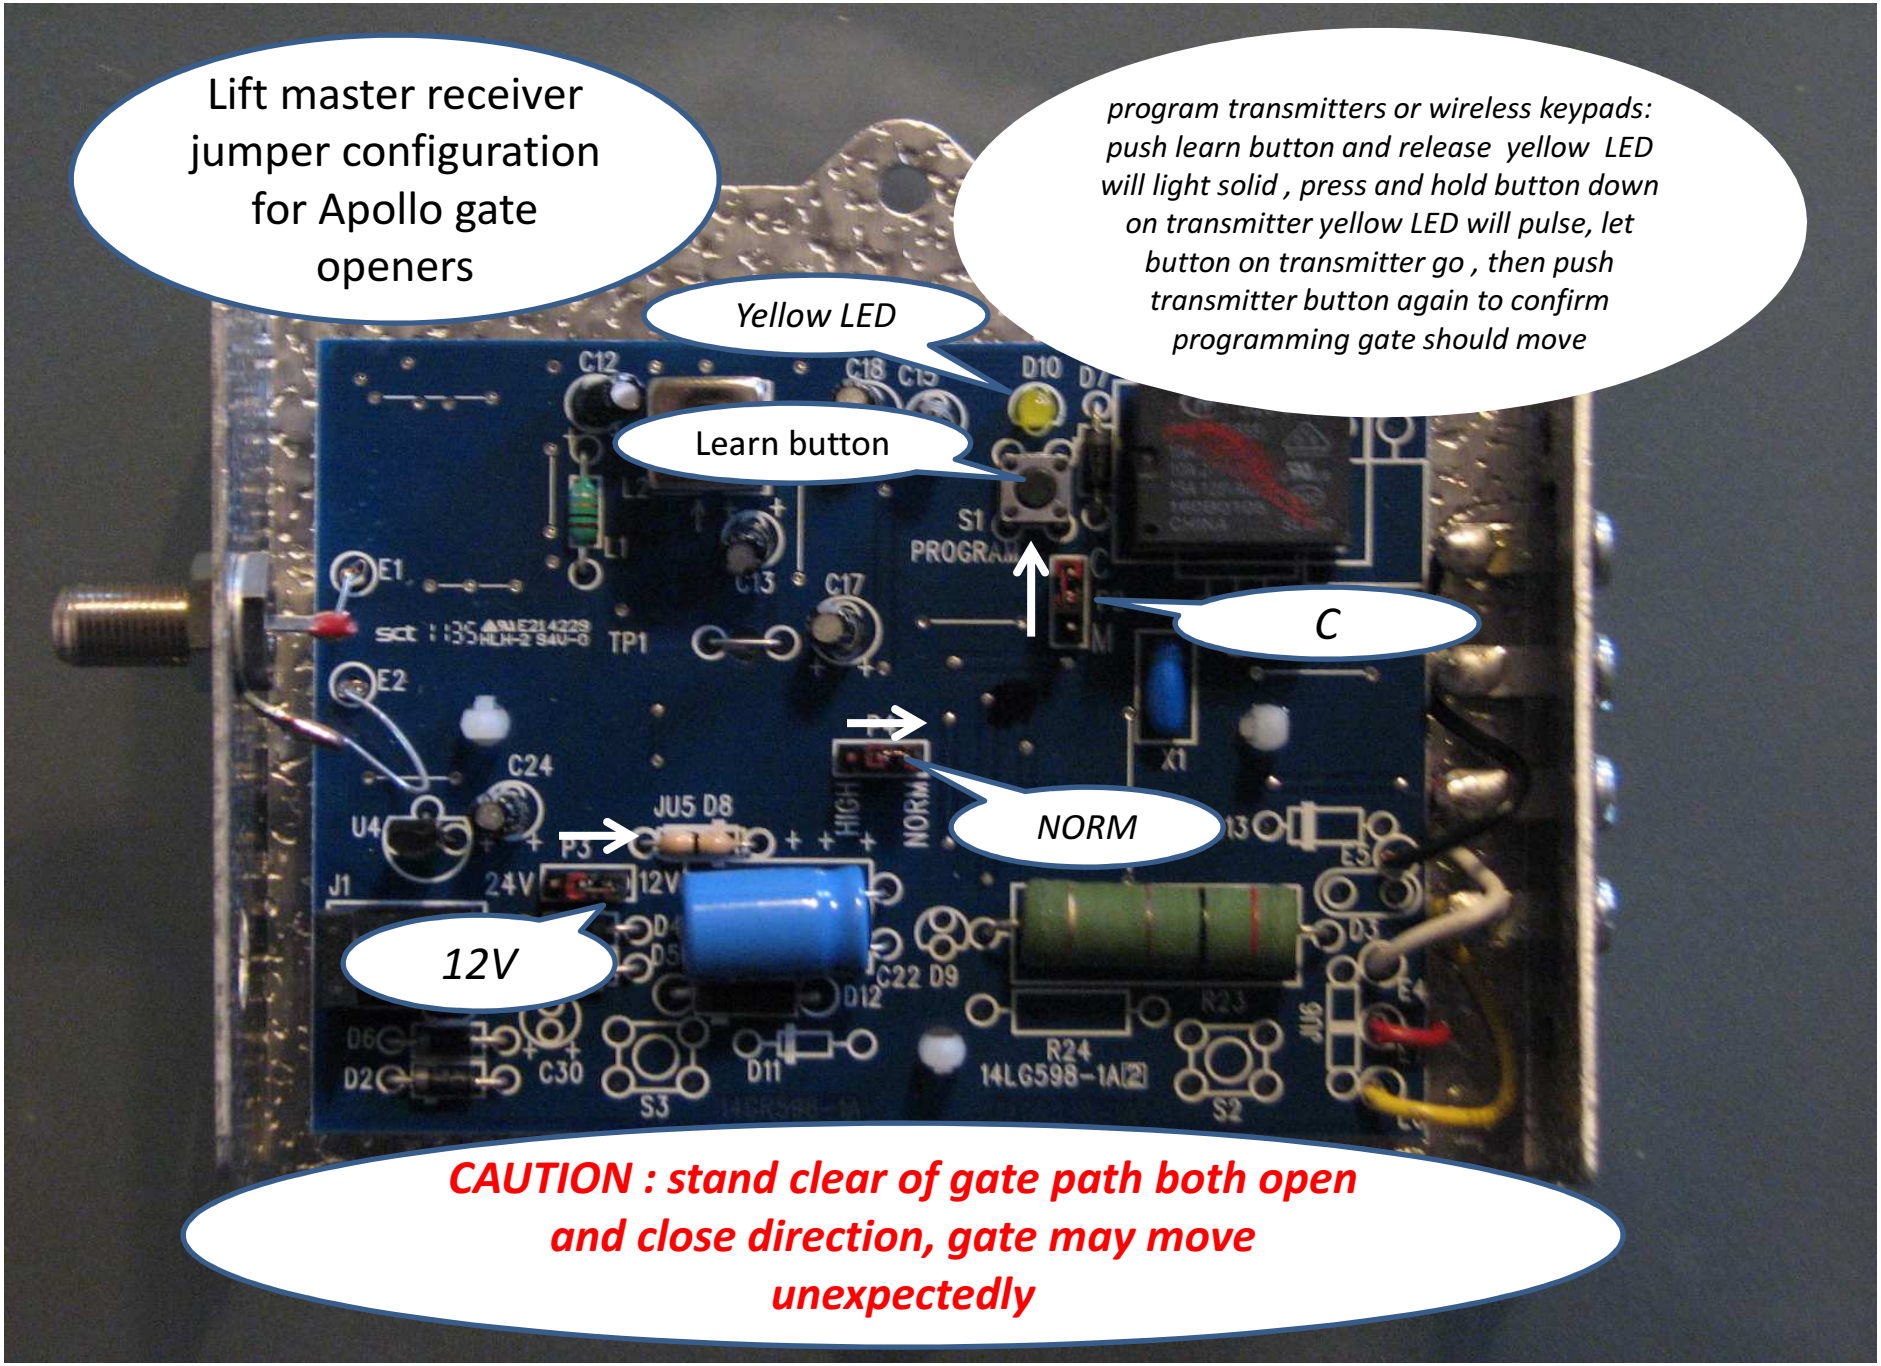
Lift master receiver jumper configuration for Apollo gate openers
program transmitters or wireless keypads: push learn button and release yellow LED will light solid , press and hold button down on transmitter yellow LED will pulse, let button on transmitter go , then push transmitter button again to confirm programming gate should move
Yellow LED
Learn button
C
NORM
12V
CAUTION : stand clear of gate path both open and close direction, gate may move unexpectedly